Table of contents

1 Operating instructions 5
1.1 Using this manual 5
1.2 Danger symbols and danger levels 5
1.2.1 Danger symbols. 5
1.2.2 Danger levels. 5
1.3 Symbols used 6
1.4 Abbreviations used 6

2 Safety. 7
2.1 Intended use 7
2.2 User profile 7
2.3 Information on product liability 7
2.4 Application limits 8
2.4.1 Declaration concerning the ATEX directive (2014/34/EU) 8
2.5 Warnings for intended use 8
2.5.1 Personal injury or damage to device. 8
2.5.2 Incorrect handling of the centrifuge 10
2.5.3 Incorrect handling of the rotors 10
2.5.4 Extreme strain on the centrifugation tubes 11
2.5.5 Aerosol-tight centrifugation 12
2.6 Safety10 0 0 10 547coe6gusl. . 8
2.5 Warnings for intended use . . . . . n.316 Td fArc5Et. . . . . .ury or -ifuation . . . . . .
1.2 Danger symbol94(Inl . . . . 1U. . . . . .Ema C . . . . .)-8(5)]TJ 0 -1.316 T

43t12
2.6 Safety10 0 0 10 547coe6gusl. . 8

5.8 Centrifugation . . . 29
5.8.1 Centrifuging with preset time . . . 30
5.8.2 Centrifuging in continuous operation . . . 30
5.8.3 Short run centrifugation . . . 31
5.8.4 Removing the rotor . . . 31

6 Maintenance . . . 33
6.1 Service . . . 33
6.2 Preparing cleaning/disinfection . . . 33
6.3 Cleaning/disinfection . . . 34
6.3.1 Cleaning and disinfecting the device . . . 35
6.3.2 Disinfecting and cleaning the rotor . . . 36
6.4 Additional care instructions for refrigerated centrifuges . . . 36
6.5 Cleaning glass breakage . . . 37
6.6 Fuses . . . 37
6.7 Decontamination before shipment . . . 38

7 Troubleshooting . . . 39
7.1 General errors . . . 39
7.2 Error messages . . . 40
7.3 Emergency release . . . 41

8 Transport, storage and disposal . . . 43
8.1 Transport . . . 43
8.2 Storage . . . 43
8.3 Disposal . . . 44

9 Technical data . . . 45
9.1 Power supply . . . 45
9.2 Ambient conditions . . . 45
9.3 Weight/dimensions . . . 45
9.4 Noise level . . . 46
9.5 Application parameters . . . 46
9.5.1 Centrifuge 5424 R . . . 46
9.6 Service life for accessories . . . 47
9.7 Rotors . . . 48
9.7.1 rcf display and calculation . . . 49

10 Ordering information . . . 51
10.1 Accessories . . . 51
10.1.1 Rotors and rotor lids . . . 51
10.1.2 Adapter . . . 51
10.1.3 Other accessories . . . 52
10.2 Fuses . . . 52

Certificates . . . 53

1 Operating instructions

1.1 Using this manual

- Read this operating manual completely before using the device for the first time. Observe the instructions for use of the accessories where applicable.
- This operating manual is part of the product. Please keep it in a place that is easily accessible.
- Enclose this operating manual when transferring the device to third parties.
- The current version of the operating manual for all available languages can be found on our webpage www.eppendorf.com/manuals.

The Centrifuge 5424 R is available in two versions: keypad or rotary knobs. This operating manual generally describes how to operate the keypad version. However, it also applies to the rotary knob version.

1.2 Danger symbols and danger levels

1.2.1 Danger symbols

The safety instructions in this manual have the following danger symbols and danger levels:

	Biohazard		Explosive substances
	Electric shock		Risk of crushing
	Hazard point		Material damage

1.2.2 Danger levels

DANGER	*Will* lead to severe injuries or death.
WARNING	*May* lead to severe injuries or death.
CAUTION	May lead to light to moderate injuries.
NOTICE	May lead to material damage.

2 Safety

2.1 Intended use

The Centrifuge 5424 R is used for the separation of aqueous solutions and suspensions of different densities in approved sample tubes.

The Centrifuge 5424 R is exclusively intended for use indoors. All country-specific safety requirements for operating electrical equipment in the laboratory must be observed.

2.2 User profile

The device and accessories may only be operated by trained and skilled personnel.

Before using the device, read the operating manual carefully and familiarize yourself with the device's mode of operation.

2.3 Information on product liability

In the following cases, the designated protection of the device may be affected. Liability for any resulting

2.4 Application limits

2.4.1 Declaration concerning the ATEX directive (2014/34/EU)

Due to its design and the environmental conditions inside the device, the Centrifuge 5424 R is not suitable for use in a potentially explosive atmosphere.

WARNING! Damage to health due to infectious liquids and pathogenic germs.

4 When handling infectious liquids and pathogenic germs, observe the national regulations,

NOTICE! Damage to the device due to spilled liquids.

1. Switch off the device.
2. Disconnect the device from the mains/power supply.
3. Carefully clean the device and the accessories in accordance with the cleaning and disinfection instructions in the operating manual.
4. If a different cleaning and disinfecting method is to be used, contact Eppendorf AG to ensure that the intended method will not damage the device.

NOTICE! Damage to electronic components due to condensation.
Condensate may form in the device when it has been transported from a cool environment to a warmer environment.

4 After installing the device, wait for at least 4 h. Only then connect the device to the mains/ power line.

2.5.2 Incorrect handling of the centrifuge

NOTICE! Damage from knocking against or moving the device during operation.
If the rotor hits the rotor chamber wall, it will cause considerable damage to the device and rotor.

4 Do not move or knock against the device during operation.

2.5.3 Incorrect handling of the rotors

WARNING! Risk of injury from improperly attached rotors and rotor lids.

4 Only centrifuge with rotor and rotor lid firmly tightened.
4 If there are any unusual noises when the centrifuge is started up, the rotor or rotor lid may not be attached properly. Immediately press the start/stop key to stop centrifuging.

CAUTION! Risk of injury due to asymmetrical loading of a rotor.

4 Load rotors symmetrically with identical tubes.
4 Only load adapters with suitable tubes.
4 Always use the same type of tubes (weight, material/density and volume).
4 Check symmetric loading by balancing the adapters and tubes used with scales.

CAUTION! Risk of injury from overloaded rotor.
The centrifuge is designed for the centrifugation of material with a maximum density of 1.2 g/mL at maximum speed and filling volume and/or load.

4 Do not exceed the maximum load of the rotor.

NOTICE! Damage to rotors from aggressive chemicals.

2.5.4 Extreme strain on the centrifugation tubes

2.5.5 Aerosol-tight centrifugation

2.6 Safety instructions on device and accessories

Depiction	Meaning	Location
	NOTICE 4 Observe the safety instructions in the operating manual.	Right side of the device
	4 Observe operating manual.	Right side of the device
	Warning: Possible hand injury	Upper side of the device
	4 Always tighten the rotor with the enclosed rotor key.	Upper side of the device, under the centrifuge lid
	Warning of biological risks when handling infectious liquids or pathogenic germs.	Aerosol-tight fixed-angle rotors: Rotor lid

3 Product description

3.1 Product overview

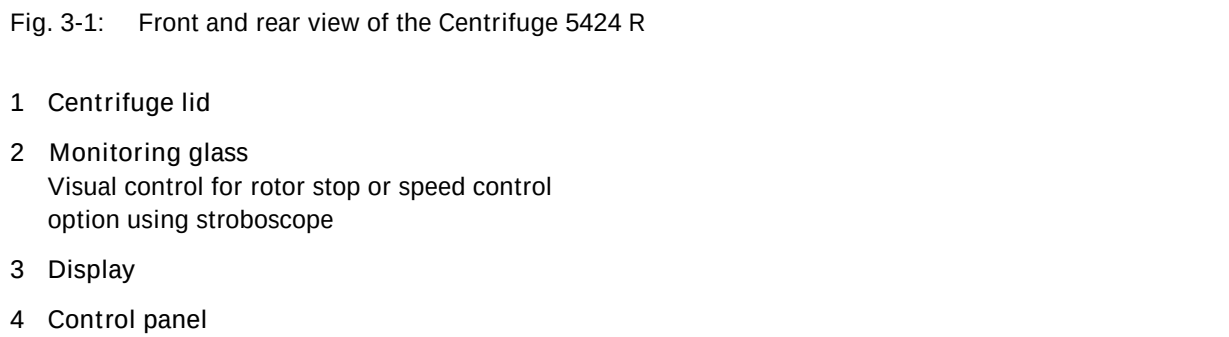

Fig. 3-1: Front and rear view of the Centrifuge 5424 R

1 Centrifuge lid

2 Monitoring glass
Visual control for rotor stop or speed control option using stroboscope

3 Display

4 Control panel

3.2 Delivery package

1	Centrifuge 5424 R
1	Rotor key
1	Mains/power cord
1	Directions
1	Condensation water tray

- 4 Check whether the delivery is complete.
- 4 Check all parts for any transport damage.
- 4 To safely transport and store the device, retain the transport box and packing material.

3.3 Features

The versatile Centrifuge 5424 R has a capacity of 24 × 2 mL and can achieve a maximum speed of 21130 × g / 15000 rpm. You can select from different rotors to centrifuge the following tubes for various applications:

- Micro test tubes (0.2 mL to 2.0 mL)
- PCR strips
- Microtainers (0.6 ml)
- Spin columns (1.5/2.0 ml)

The Centrifuge 5424 R has an additional temperature control function for centrifugation between -10°C and +40°C. Use the fast temp function to start a temperature control run without samples to bring the rotor chamber incl. rotor, buckets and adapters to the set target temperature quickly.

The Centrifuge 5424 R can be connected to the Eppendorf VisioNize system.The Eppendorf VisioNize system provides the option to connect the centrifuge to centralized monitoring and data management software.For further information, please refer to the www.eppendorf.com.

3.4 Name plate

Fig. 3-2: Eppendorf AG device identification (example)

1 Maximum density of the material for centrifuging
2 Maximum kinetic energy
3 Maximum speed
4 Serial number
5 Product name
6 Rated voltage
7 Rated frequency
8 Maximum rated current
9 Maximum rated power
10 Information on the refrigerant (refrigerated centrifuges only)
11 Data matrix code for serial number
12 Designation of origin
13 CE marking
14 Certification marks and symbols (device-specific)
15 Address of manufacturer
16 Manufacturer

Tab. 3-1: Certification marks and symbols (device-specific)

Symbol/Certification mark	Meaning
SN	Serial number
	Symbol for waste electrical and electronic equipment (WEEE) according to EU Directive 2012/19/EU, European Community
	UL mark: declaration of conformity, USA
	Conformity mark for electromagnetic compatibility according to the *Federal Communications Commission*, USA
	China conformity mark – Use of certain hazardous substances in electrical and electronic products *(Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products SJ/T 11363-2006)*, People's Republic of China

4 Installation

4.1 Selecting the location

Select the location of the device according to the following criteria:

- Mains/power connection in accordance with the name plate

4.3 Installing the instrument

Prerequisites

The device is on a suitable lab bench.

WARNING! Danger due to incorrect voltage supply.

4 Only connect the device to voltage sources which correspond with the electrical requirements on the name plate.

1. Let the device warm up to ambient temperature.
2. Check that the mains voltage and frequency match the requirements on the device type plate.
3. Connect the centrifuge to the mains/power line and switch it on at the mains/power switch.
   - The display is active.
   - Lid opens automatically
4. Only device version with rotor:Turn rotor counterclockwise supplied rotor key and remove rotor towards the top in an upright movement.
5. Remove the transport protection pad.
6. Place the rotor vertically on the motor shaft.
7. Turn the rotor nut using the rotor key clockwise until the rotor nut is tightened.
8. Insert the condensation water tray into the holder provided .

5 Operation

5.1 Operating controls

The Centrifuge 5424 R is available in two versions: with keypad (arrow keys) or with rotary knobs. This operating manual describes the operation of the centrifuge with keypad. The centrifuge with rotary knobs is operated in the same manner.

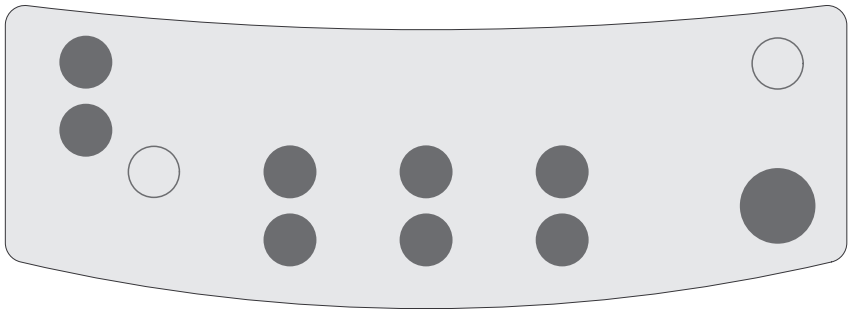

Fig. 5-1: Operating controls Centrifuge 5424 R

1 menu/enter key
Open the menu
Confirm your selection

2 rpm/rcf key
Switch display of centrifugation speed (rpm or rcf)

3 Display

4 short key
Short run centrifugation

5 open key
Release the lid

6 start/stop key
Start and stop centrifugation

7 speed arrow keys
Set the speed of centrifugation
Keep the arrow key pressed: Quick setting

8 temp arrow keys
Setting the temperature
Keep the arrow key pressed: Quick setting

9 time arrow keys
Set the centrifugation time
Keep the arrow key pressed: Quick setting

10 fast temp key
Start fast temp temperature control run

11 Menu arrow key
Navigating in the menu

Fig. 5-2: Display of theCentrifuge 5424 R

1 Centrifugation time

2 Status of the key lock (LOCK)
Centrifugation parameters cannot be accidentally changed.
No key lock.

6 ATSET function
Start of time counting when reaching 95% of the preset *g* force (rcf) or speed (rpm)
Time counting begins immediately.

4 Temperature

5 Soft ramp
Rotor accelerates and brakes slowly.
No symbol: Rotor accelerates and brakes rapidly.

6 -force (rcf) or speed (rpm)
Actual value

7 Centrifuge status
centrifuge lid unlocked.
centrifuge lid locked.
(flashing): centrifuging in progress.

8 -force (rcf) or speed (rpm)
rcf: *g*-force (relative centrifugal acceleration).

Menu level		Function	Symbol on the display
VOL	*VOL1* *...* *VOL5*	Adjust the speaker volume in 5 steps. The loudspeaker must be switched on for the adjustment to be audible.	
SLEEP Standby mode	*ON*	If the centrifuge has not been used for 15 min and the standby mode has been switched on, it switches to standby mode. *EP* appears in the display. To exit standby mode, press any key or close the centrifuge lid.	
	OFF	Standby mode deactivated.	

5.4 Switching on the centrifuge

4 Switch the centrifuge on at the mains/power switch.
- The parameter settings of the last run are displayed.
- The lid opens.

5.5 Replacing the rotor

NOTICE! Material damage due to improper rotor insertion.
The motor shaft or bearing may get damaged if the rotor falls into the motor shaft guides in an uncontrolled manner when it is inserted.

4 Hold the rotor with both hands.
4 Guide the rotor onto the motor shaft.

5.5.1 Inserting the rotor

1. Place the rotor vertically onto the motor shaft from the top.
2. Insert the supplied rotor key into the rotor nut.
3. Turn rotor key clockwise until the rotor nut is firmly tightened.

5.5.2 Removing the rotor

1. Turn the rotor nut counterclockwise using the supplied rotor key.
2. Lift the rotor out vertically.

5.6 Closing the centrifuge lid

WARNING! Risk of injury when opening or closing the centrifuge lid.
There is a risk of crushing your fingers when opening or closing the centrifuge lid.

4 When opening or closing the centrifuge lid, do not reach between the lid and device or into the latching mechanism of the lid.
4 Always open the centrifuge lid completely to prevent it from falling.

4 Check correct attachment of rotor and rotor lid.
4 Push down the centrifuge lid until the lid latch engages and the lid is automatically closed.

The centrifuge will close automatically.

The open key lights up blue. The display shows the symbol.

5.7 Cooling

5.7.1 Temperature adjustment

4 Select a temperature (-10 °C to +40 °C) using the arrow keys temp.

The temperature can also be changed during centrifugation.

5.7.2 Temperature display

If the rotor is stopped:	Set temperature
During centrifugation:	Actual temperature

5.7.3 Temperature monitoring

After the set temperature has been reached, the centrifuge reacts to temperature deviations during centrifugation as follows:

Deviation from the target value	Action
ΔT > 3°C	Temperature display flashes.
ΔT > 5°C	Display *Error 18*. Centrifugation is stopped automatically.

5.7.4 FastTemp

With this function, you can immediately start a temperature run without samples, at rotor- or temperature-specific speeds. This will quickly bring the rotor chamber, including rotor and adapter, up to the set target temperature.

Prerequisites

- The centrifuge is switched on.
- The rotor and rotor lid are attached properly.
- The centrifuge lid is closed.
- Temperature and *g*-force (rcf)/speed (rpm) for the centrifugation are set (see *Centrifugation on p. 29)*.

1. Press the fast temp key.

   The display shows *FT*, the current temperature and *g*-force (rcf)/speed (rpm).
   The temperature control run automatically ends when the set temperature is reached. A periodic signal tone sounds.

2. Press the start/stop key to end the temperature control run early.

After the temperature control run has ended, the centrifuge maintains the rotor chamber temperature at the target temperature when the centrifuge lid is closed, if the target temperature is below the ambient temperature. However, independent of the target temperature, 4 °C must be met via this continuous cooling in order to prevent the rotor chamber from freezing.

5.8.3 Short run centrifugation

You can carry out a short run with the currently set or with the maximum g-force (rcf) or speed (rpm) of the rotor used. This is set in the device menu (see *Menu structure on p. 25)* before executing the following steps in the specified sequence:

5.8.3.1 Performing short spin centrifugation

1. A short run at current speed/g-force (rcf) or speed (rpm) can be set directly using the speed arrow keys.
2. Use the temp arrow keys to adjust the temperature.
3. Start short run: Hold down the short key.
   - flashes in the display while the rotor is running.
   - The time is counted upwards in seconds.
   - During short run centrifuging all other keys are blocked.
4. End short run: Release the short key.

6 Maintenance

6.1 Service

WARNING! Risk of fire or electrical shock

4 Have the centrifuge's electrical safety, especially the paths for the protective connections, checked every 12 months by trained and skilled personnel.

We recommend to have the centrifuge and the associated rotors checked by Technical Service during a service at least every 12 months. Please note the country-specific regulations.

6.2 Preparing cleaning/disinfection

4 Clean all accessible surfaces of the device and the accessories at least weekly and when contaminated.

4 Clean the rotor regularly. This way the rotor is protected and the durability is prolonged.

4 Furthermore, observe the notes on decontamination (see *Decontamination before shipment on p. 38)* when the device is sent to the authorized Technical Service for repairs.

The procedure described in the following chapter applies to the cleaning as well as to the disinfection or decontamination. The table below describes the steps required on top of this:

Cleaning	Disinfecting/decontamination
1. Use a mild cleaning fluid to clean the accessible surfaces of the device and the accessories. 2. Carry out the cleaning as described in the following chapter.	1. Choose the disinfection method which corresponds to the legal regulations and guidelines in place for your range of application. For example, use alcohol (ethanol, isopropanol) or alcohol-based disinfectants.

6.3 Cleaning/disinfection

DANGER! Electric shock due to the ingress of liquid.

- 4 Switch off the device and disconnect it from the mains/power line before starting cleaning or disinfection.
- 4 Do not allow any liquids to penetrate the inside of the housing.
- 4 Do not perform a spray clean/spray disinfection on the housing.
- 4 Only reconnect the device to the mains/power line when it is completely dry, both inside and outside.

WARNING! Damage to health due to limited aerosol tightness in the event of incorrect use.
Mechanical stresses and contamination by chemicals or other aggressive solvents may impair the aerosol tightness of the rotors and rotor lids.Autoclaving at excessive temperatures can lead to vessels, adapters and rotor lids becoming brittle and deformed.

- 4 Check the integrity of the seals of the aerosol-tight rotor lids or caps before each use.
- 4 Only use aerosol-tight rotor lids or caps if the seals are undamaged and clean.
- 4 Do not exceed temperatures of 121°C or a time of more than 20 min. while autoclaving.
- 4 After each proper autoclaving process (121 °C, 20 min.), thinly brush the threads of the rotor lid screw with pivot grease (order no. Int. 5810 350.050, North America 022634330).
- 4 Replace aerosol-tight rotor lids without replaceable seals after 50 autoclaving cycles.
- 4 For QuickLock rotor lids, only the seal must be replaced after 50 autoclaving cycles.
- 4 Never store aerosol-tight rotors or buckets closed.

NOTICE! Damage from the use of aggressive chemicals.

- 4 Do not use any aggressive chemicals on the device or its accessories, such as strong and weak bases, strong acids, acetone, formaldehyde, halogenated hydrocarbons or phenol.
- 4 If the device has been contaminated by aggressive chemicals, clean it immediately using a mild cleaning agent.

NOTICE! Corrosion due to aggressive cleaning agents and disinfectants.

- 4 Do not use any corrosive cleaning agents, aggressive solvents or abrasive polishes.
- 4 Do not incubate the accessories in aggressive cleaning agents or disinfectants for longer periods.

NOTICE! Damage from UV and other high-energy radiation.

- 4 Do not use UV, beta, gamma, or any other high-energy radiation for disinfection.
- 4 Avoid storage in areas with strong UV radiation.

Autoclaving

6.3.1 Cleaning and disinfecting the device

1. Open the lid. Switch the device off at the mains/power switch. Disconnect the mains/power plug from the voltage supply.
2. Loosen the rotor nut by turning the rotor key counterclockwise.
3. Remove the rotor.
4. Clean and disinfect all accessible surfaces on the device including the mains/power cord using a damp cloth and recommended cleaning agents.
5. Thoroughly clean the rubber seals of the rotor chamber with water.
6. Rub the dry rubber seals with glycerine or talcum powder to prevent them from becoming brittle. Other components of the device, such as the lid latch, motor shaft and rotor cone, must not be lubricated.
7. Clean the motor shaft with a soft, dry, lint-free cloth. Do not grease the motor shaft.
8. Check the motor shaft for damage.
9. Check the device for corrosion and damage.
10. Leave the centrifuge lid open when the device is not being used.
11. Only connect the device to the power supply if it is fully dry inside and out.

6.3.2 Disinfecting and cleaning the rotor

1. Inspect the rotor and accessories for damage and corrosion. Do not use any damaged rotors or accessories.
2. Clean and disinfect the rotors and accessories using the recommended cleaning agents.
3. Clean and disinfect the rotor bores using a bottle brush.
4. Rinse the rotors and accessories thoroughly with distilled water. Rinse the rotor bores of fixed-angle rotors particularly thoroughly.

   Do not immerse the rotor in liquid as liquid can enter through the openings when doing so.

5. Place the rotors and accessories on a towel to dry. Place fixed-angle rotors with the rotor bores facing downwards to allow the bores to also dry.
6. Clean the rotor cone with a soft, dry, lint-free cloth. Do not lubricate the rotor cone.
7. Inspect the rotor cone for damage.
8. Place the dry rotor onto the motor shaft.
9. Tighten the rotor nut firmly by turning it clockwise with the rotor key.
10. Leave the rotor lid open when the rotor is not being used.

6.4 Additional care instructions for refrigerated centrifuges

- Empty and clean the condensation water tray regularly and especially after liquid spillage in the rotor chamber. Pull out the condensation water tray at the front right under the device.
- Regularly free the rotor chamber from ice formations by thawing, by either leaving the centrifuge lid open or by performing a short temperature control run at approx. 30 °C.
- Wipe up the condensation water in the rotor chamber. Use a soft, absorbent cloth for this.
- No later than every 6 months, remove any dust deposits from the ventilation slits of the centrifuge using a brush or swab. First switch off the device and remove the power plug.

6.7 Decontamination before shipment

If you are shipping the device to the authorized Technical Service for repairs or to your authorized dealer for disposal please note the following:

WARNING! Risk to health from contaminated device.

1. Observe the information in the decontamination certificate. It is available as a PDF document on our webpage (www.eppendorf.com/decontamination).
2. Decontaminate all the parts you are going to dispatch.
3. Include the fully completed decontamination certificate in the shipment.

7 Troubleshooting

If you cannot remedy an error with the recommended measures, please contact your local Eppendorf partner. The contact addresses can be found on the Internet at www.eppendorf.com.

7.1 General errors

Problem	Cause	Solution
No display.	No mains/power connection.	4 Check the mains/power connection.
	Mains/power outage.	4 Check the fuse of the centrifuge. 4 Check the mains/power fuse of the

8 Transport, storage and disposal

8.1 Transport

CAUTION! Risk of injury due to lifting and carrying of heavy loads
The device is heavy. Lifting and carrying the device can lead to back injuries.

4

4 Remove the rotor from the centrifuge before transport.
4 Use the original packing for transport.

8.2 Storage

9 Technical data

9.1 Power supply

Centrifuge 5424 R

Mains/power connection	230 V, 50 to 60 Hz 120 V, 50 to 60 Hz 100 V, 50 to 60 Hz
Current consumption	1.6 A (230 V) 3.2 A (120 V) 3.4 A (100 V)
Power consumption	max. 350 W
EMC: Interference emitted (radio interference)	230 V: EN 61326-1/EN 55011 – Class A 120 V: CFR 47 FCC Part 15 – Class B 100 V: EN 61326-1/EN 55011 – Class B
EMC: Interference resistance	EN 61326-1
Overvoltage category	II
Fuses – 230 V Fuses – 120 V Fuses – 100 V	3.15 AT HBC

9.2 Ambient conditions

9.3 Weight/dimensions

Centrifuge 5424 R

9.4 Noise level

The noise level was measured according to DIN EN ISO 3745 frontally in a sound measuring room with accuracy class 1 at a distance of 1 m from the device and at lab bench height.

Noise level	< 54 dB(A)

9.5 Application parameters

9.5.1 Centrifuge 5424 R

Tab. 9-1: Acceleration time and braking time according to DIN 58 970

These values were calculated for 230 V at 23°C.

9.6 Service life for accessories

CAUTION! Danger due to material fatigue.
When the service life is exceeded, it cannot be guaranteed that the material of the rotors and the accessories will withstand the stresses during centrifugation.

4 Do not use any accessories which have exceeded their maximum service life.

Eppendorf states the maximum service life of the rotors and accessories both in years and in the maximum number of cycles. The decisive factor for the service life is which case occurs first, usually this is the number of years in operation.

Each centrifugation run in which the rotor is accelerated and braked is counted as a cycle, independent of the speed and the duration of the centrifugation run.

All other rotors and rotor lids can be used during the entire service life of the centrifuge if the following conditions are met:
- Proper use
- Recommended maintenance
- Undamaged condition

Accessories	Maximum service life after initial setup	
Rotor lid of polycarbonate (PC), polypropylene (PP) or polyetherimide (PEI)	–	3 years
Aerosol-tight rotor lid, without replaceable seals	50 autoclaving cycles	–
QuickLock rotor lid		3 years
Seals in the QuickLock rotor lid	50 autoclaving cycles	–
Adapters	–	1 year

The date of manufacture is stamped on the rotors and buckets in the format *03/15* or *03/2015* (= March 2015). On the inside of the plastic-rotor lids and aerosol-tight caps, the date of manufacture is stamped in the form of a clock .

Measures to ensure aerosol tightness:

4 Replace the seal of QuickLock rotor lids after 50 autoclaving cycles.

4 Exchange aerosol-tight rotor lid without replaceable seals after 50 autoclaving cycles.

9.7 Rotors

Eppendorf centrifuges may only be operated with rotors that are intended for use with the corresponding centrifuge.

4 Only use rotors that are intended for use with the corresponding centrifuge.

Please note the manufacturer's information on the centrifugation resistance of the sample tubes used (maximum *g*-force).

For ordering information, refer to the English and German version of the operating manual.

	Max. capacity	Max. g-force (rcf) or speed (rpm) without adapter Max. load per rotor bore(1)	Notes
Rotor FA-45-24-11	24 micro test tubes of 1.5/2.0 ml each or spin columns. With adapters: • 0.2 mL PCR tubes • 0.4 ml/0.5 ml micro test tubes • 0.6 mL Microtainers	21.130 x g/ 15.000 rpm 3.75 g	• Aerosol-tight(2) rotor lid (aluminum). • Spin columns available, better with rotor FA-45-18-11-kit.
Rotor FA-45-24-11-Special	24 micro test tubes of 1.5/2.0 ml each or spin columns. With adapters: • 0.2 mL PCR tubes • 0.4 ml/0.5 ml micro test tubes • 0.6 mL Microtainers	21.130 x g/ 15.000 rpm 3.75 g	• Aerosol-tight(2) rotor lid (aluminum). • PTFE-coated (particularly resistant to chemicals), marked:*coated*. • Spin columns available, better with rotor FA-45-18-11-kit.
Rotor F-45-18-11-Kit	18 spin columns or 1.5/2.0 ml tubes. With adapters: • 0.2 mL PCR tubes • 0.4 ml/0.5 ml micro test tubes • 0.6 mL Microtainers	18.111 x g/ 15.000 rpm 3.75 g	• Uniquely high edge, for all commercial spin columns. Also observe the note on centrifugation with open tube lids (see *Extreme strain on the centrifugation tubes on p. 11)*.
Rotor F-45-32-5-PCR	Four PCR strips (5/8) or 32 0.2 ml PCR vials.	18.615 x g/ 15.000 rpm 3.5 g	

(1) Maximum load per rotor bore for adapter + tube + contents.

(2) Aerosol tightness tested and certified by the Centre of Emergency Preparedness and Response, Health Protection Agency, Porton Down (UK) (see certificates at the end of this operating manual).

10 Ordering information

10.1 Accessories

10.1.1 Rotors and rotor lids

Order no. (International)	Order no. (North America)	Description
5424 702.007	022653008	Rotor FA-45-24-11 aerosol-tight, aluminum, 45° angle, 24 places, max. tube diameter 11 mm, incl. rotor lid (aluminum)
5424 703.003	022653024	Replacement lid for rotor FA-45-24-11 aerosol-tight, aluminum
5424 700.004	022653041	Rotor FA-45-24-11-Special aerosol-tight, aluminum, PTFE-coated, 45° angle, 24 places, max. tube diameter 11 mm, incl. rotor lid (aluminum)
5424 701.000	022653067	Replacement lid for rotor FA-45-24-11-Special aerosol-tight, aluminum, PTFE-coated
5424 706.002	022653083	Rotor F-45-18-11-Kit aluminum, 45° angle, 18 places, max. tube diameter 11 mm, incl. rotor lid (polypropylene)
5424 707.009	022653105	Spare lid for rotor F-45-18-11-Kit Polypropylene
5424 704.000	022653121	Rotor F-45-32-5-PCR incl. rotor lid (aluminum)
5424 708.005	022653148	Spare lid for rotor F-45-32-5-PCR aluminum

*) Aerosol impermeability tested and certified by the Centre of Emergency Preparedness and Response, Health Protection Agency, Porton Down (UK).

10.1.2 Adapter

Order no. (International)	Order no. (North America)	Description
		Adapter used in FA-45-24-11, FA-45-24-11-Special and F-45-18-11-Kit
5425 715.005	022636260	for 1 PCR tube (0.2 mL, max. Ø 6 mm), set of 6
5425 717.008	022636243	for 1 micro test tube (0.4 mL, max. Ø 6 mm), set of 6
5425 716.001	022636227	for 1 sample tube (0.5 mL, max. Ø 6 mm) or 1 Microtainer (0.6 mL, max. Ø 8 mm), set of 6

10.1.3 Other accessories

Order no. (International)	Order no. (North America)	Description
5416 301.001	022634305	Rotor key Standard
5404 850.085	5404850085	Tray for condensation water

10.2 Fuses

Order no. (International)	Order no. (North America)	Description
5424 852.122	950004267	Fuse 3,15 A T (230 V), set of 2
5424 852.130	950004241	6,3 A T (120 V/100 V), set of 2

Evaluate Your Manual

Give us your feedback.
www.eppendorf.com/manualfeedback

Your local distributor: www.eppendorf.com/contact
Eppendorf AG · Barkhausenweg 1 · 22339 Hamburg · Germany
eppendorf@eppendorf.com · www.eppendorf.com